

CPU-12 POWER BOX PARTS LIST



- A - Enclosure, NEMA 4, 10 x 8 x 6 #61354 1ea
- B - Contactor w/Coil #16435 & Overload #16430 1ea
- C - Contactor w/Coil #16438 & Overload #16439 1ea
- D - Hardware - Supplied with item "A"
- E - Enclosure Back Plate, 8-3/4 x 6-7/8 #61363 1ea
- F - Strain Relief 3/4" #10605 & Conduit nut 3/4" #10740 3ea
- G - Strain Relief 1/2" #40066 & Conduit nut 1/2" #10790 1ea
- H - Flat Washer, Aluminum 1-1/2" (Use with item "F") #77081 6ea
- I - Din Rail End Bracket/Stop #61370 4ea
- J - Switch, Red Selector, 3 Position #61355 1ea
- K - Switch, Green Push Button, N.O. #61364 1ea
- L - Switch, Red Push Button, N.C. #61365
- M - Terminal, Through, OSC Din Rail #61356 10ea
- N - Terminal, End Plate/Partition #61357 1ea
- O - Raise/Lower Plate
- P - Start - Stop/Reset Plate
- Q - Din Rail 4" 1ea & 4.5" 1ea (not shown) (Cut to fit) #61370 2ea
- R - Transformer, 75VA 208/240/277/380/480 P.V. 24 S.V. 50/60Hz #16150 1ea